




1. DESCARGA LA APP

Puedes descargar la app Mellerware desde App Store o Google Play.

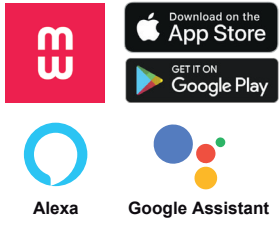


2. REGÍSTRATE

Regístrate en la App usando tu correo electrónico.

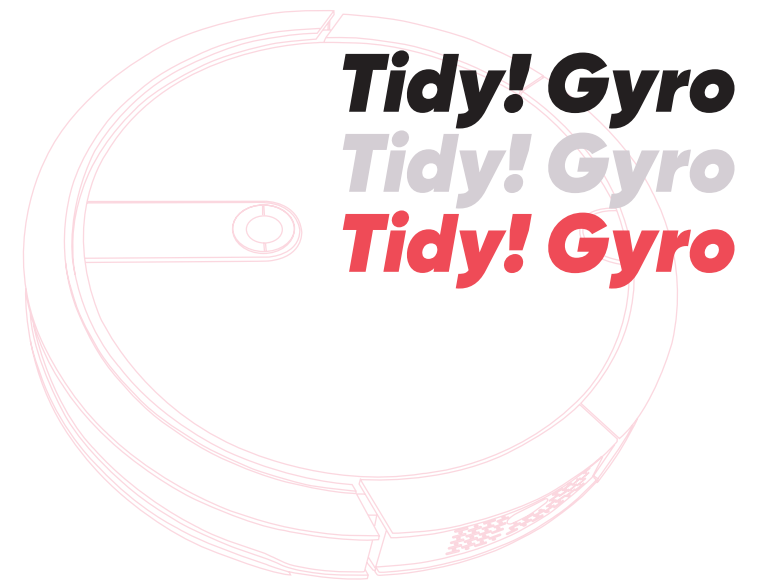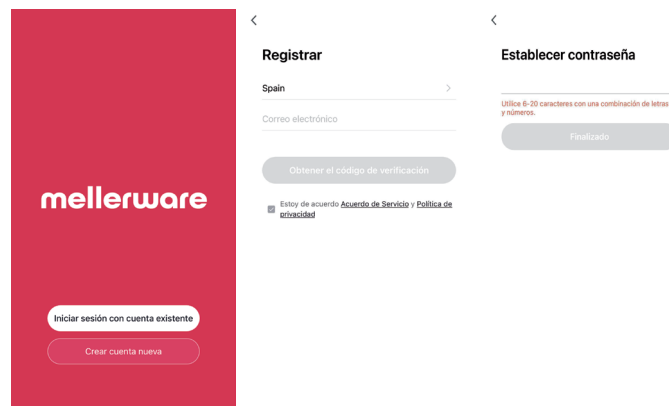


3. VINCLUA TU MODELO

Haz click en "Añadir dispositivo". Podrás añadirlo de manera manual o dejar que tu smartphone lo detecte de manera automática.

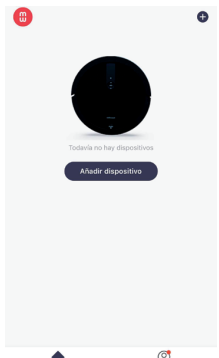


3.1 VINCLACIÓN MANUAL

Haz click sobre el modelo Tidy Gyro que aparecerá en la pantalla y sigue las instrucciones. Selecciona la red Wi-Fi e introduce la contraseña. Tu red detectará el robot y lo agregará a tus dispositivos.

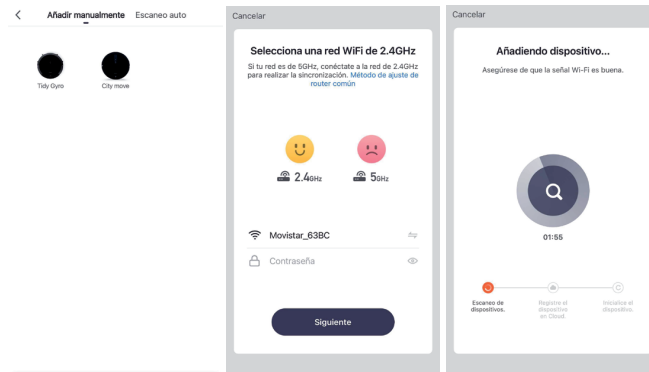


3.2 VINCLACIÓN AUTOMÁTICA

Pulsa "Escaneo auto" y tu Wi-Fi detectará automáticamente el modelo y lo agregará a tus dispositivos.

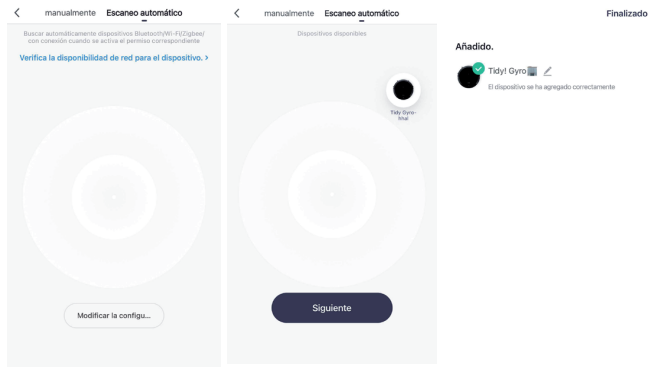

3.3 CONEXIÓN A ALEXA Y GOOGLE ASSISTANT

Ir al perfil de tu cuenta, seleccionar "Más servicios" y a continuación pulsar en Alexa o Google Assistant. Seguir los pasos que se indican en cada apartado.

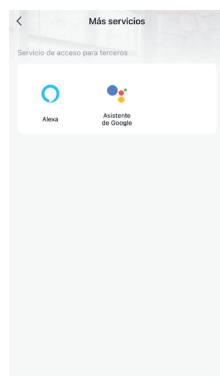


4. ACTIVA TU MODELO

En la pantalla inicial encontrarás el modelo que acabas de vincular. Personaliza el modo de limpieza y pulsa PLAY para empezar.

5. PERSONALIZA TU LIMPIEZA

Dentro de la pantalla de cada dispositivo podrás escoger el tipo de limpieza que prefieras en cada situación, programar el aspirador para que se active automáticamente y conocer a tiempo real las zonas que está limpiando.

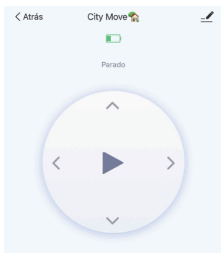

5.1 MODOS DE LIMPIEZA


- MODO AUTOMÁTICO:** El robot aspira de manera automática y combina los diferentes modos de limpieza en uno, optimizando al máximo la limpieza de tu hogar.
- MODO ALEATORIO:** Deja que tu aspirador sea quien escoja uno de sus modos de limpieza.
- MODO PERIMETRAL:** Usa el modo perimetral para asegurarte de que haya limpiado a lo largo de las paredes y alrededor de los muebles.
- MODO ESPIRAL:** El robot empieza a aspirar en un punto en concreto girando en espiral aproximadamente 1 metro de diámetro.

5.2 OTRAS FUNCIONES

- BUSCAR ESTACIÓN DE CARGA:** Pulsa este botón cuando quieras que tu aspirador deje de limpiar y vaya directo a la base de carga.
- BUSCAR EL ROBOT:** Si no encuentras tu robot pulsa "buscar robot" y emitirá un sonido para encontrarlo.
- VIDA DE ACCESORIOS:** En este apartado podrás ver el estado de los consumibles para que puedas adquirir los recambios con antelación.


5.3 PROGRAMA TU ASPIRADOR

Haz click en "Programación" y configura la hora, los días y los modos de limpieza que quieres que se activen en tu aspirador. Guarda la programación y automáticamente se activará cuando llegue el momento.

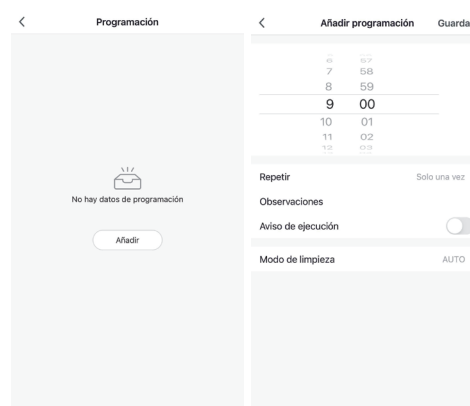


5.4 CAMBIA LA POTENCIA SEGÚN TUS NECESIDADES

Activa tu aspirador y se iluminará el botón de potencia. Haz click y selecciona entre AUTO, ECO y TURBO.

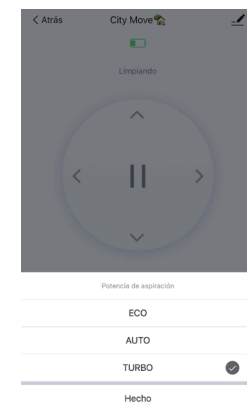


5.5 MAPA

Accede al mapa para ver en tiempo real por donde está pasando tu robot, el tiempo que lleva trabajando y el área de cobertura.

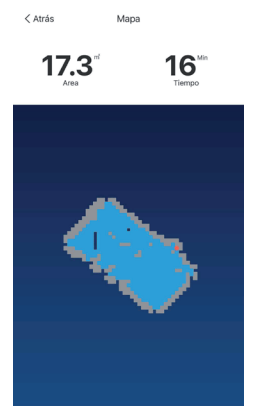



1. DOWNLOAD THE APP

Mellerware APP can be downloaded from the App Store or Google Play.

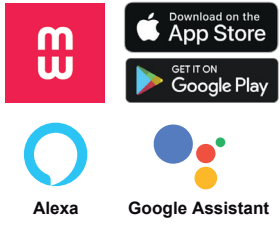


2. REGISTER

Sign up for the APP using your email.

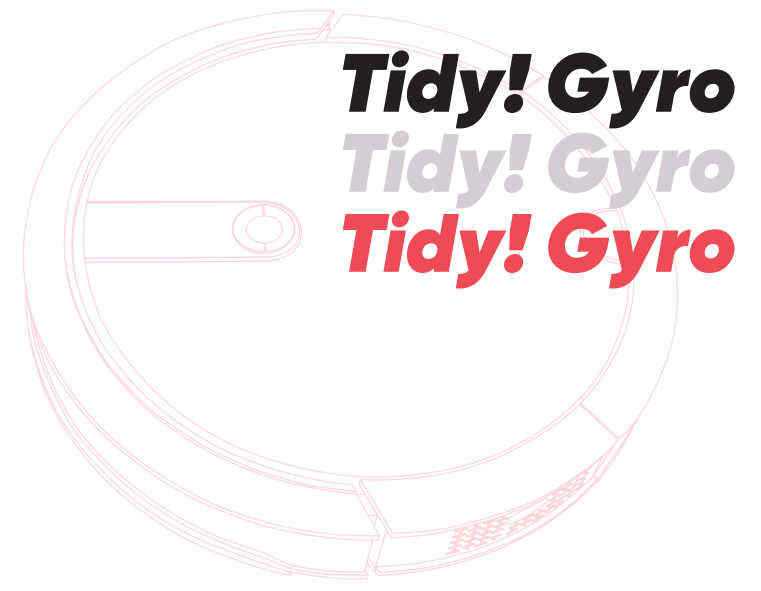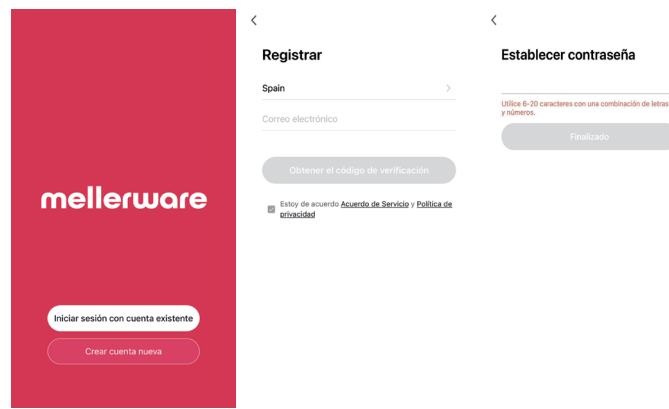


3. LINK YOUR MODEL

Click on "Add device". You can add it manually or let your smartphone detect it automatically.

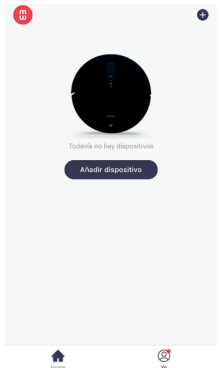


3.1 LINKING MANUALLY

Click on the Tidy Gyro model that will appear on the screen and follow the instructions. Select the Wi-Fi network and enter the password. Your network will detect the robot and add it to your devices.

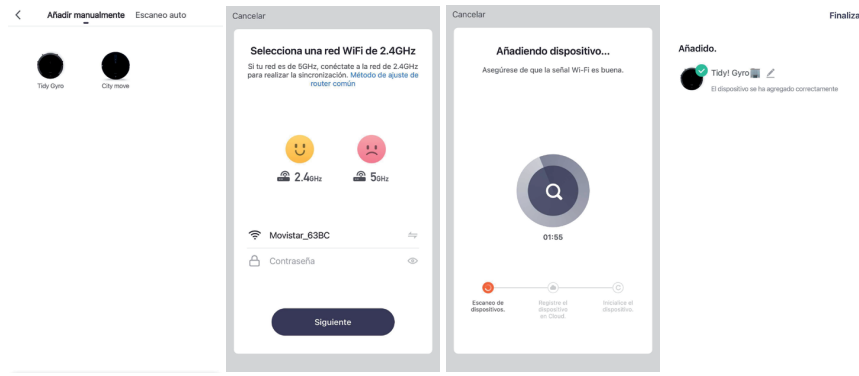


3.2 LINKING AUTOMATICALLY

Press "Auto Scan" and your Wi-Fi will automatically detect the model and add it to your devices.

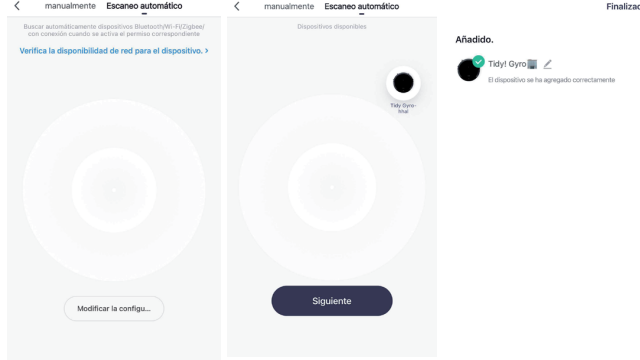

3.3 CONNECTION TO ALEXA AND GOOGLE ASSISTANT

Go to your account profile, select "More services" and then click on Alexa or Google Assistant. Follow the steps indicated in each section.

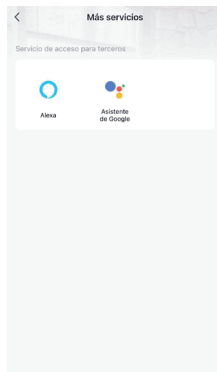


4. ACTIVATE YOUR MODEL

On the home screen you will find the model you just linked. Customize the cleaning mode and press PLAY to start.

5. PERSONALISE YOUR CLEANING

The screen for each device allows you to choose the type of cleaning you prefer for each situation, program the vacuum cleaner to start automatically and see which areas are currently being cleaned.

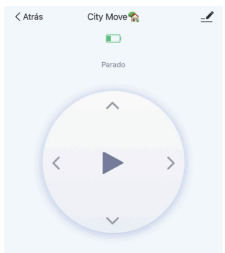

5.1 CLEANING MODES


- AUTO MODE:** The robot starts vacuuming automatically, combining the different cleaning modes in one, optimizing the cleaning of your home to the maximum.
- RANDOM MODE:** This allows the vacuum to choose one of its cleaning modes.
- PERIMETER MODE:** Use the perimeter mode to ensure that the robot cleans along the walls and around the furniture legs.
- SPIRAL MODE:** The robot starts cleaning at a specific point, spiralling outward approximately 1m in diameter and then spiralling back in to where it started.

5.2 OTHER FUNCTIONS

- BACK TO CHARGING BASE:** Press this button when you want your vacuum cleaner to stop cleaning and go directly back to the charging base.
- FIND ROBOT:** If you cannot find your robot, press "Find robot" and the robot will emit a sound that allows you to find it.
- ACCESSORIES LIFE:** You will be able to see the status of the consumables so that you can purchase spare parts in advance.


5.3 SET UP YOUR VACUUM CLEANER

Click on "Programming" and set up the time, days and cleaning modes that you want to activate in your vacuum cleaner. Save the schedule and the vacuum cleaner will start automatically at the programmed time.

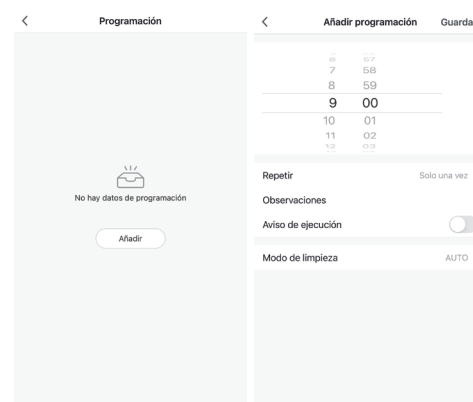

5.4 CHANGE THE POWER BASED ON YOUR NEEDS

Activate your vacuum cleaner and the power button will turn on. Click and select **AUTO**, **ECO** or **TURBO**.

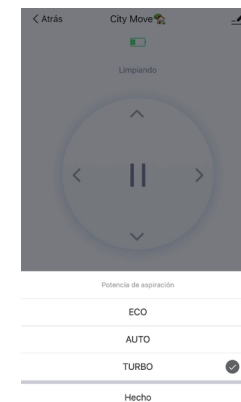

5.5 MAP

Access the map to see in real time where your robot is passing, the time it has been working and the coverage area.

